

BREAKAWAY CHANNEL **RESET INSTRUCTIONS**

This dock gate has been equipped with breakaway closing channel protection. In the event that a load leveler interferes with a closing channel, the breakaway carrier assembly will release before damaging the channel itself. **Please read and follow these instructions carefully!**

RESETTING THE BREAKAWAY CARRIER:

Install the breakaway carrier assembly by positioning the slots through the shoulder screws and sliding the assembly upward as illustrated (Fig 1). Once the small holes of the channel and breakaway carrier assembly align, reinstall the new aluminum shear screw.

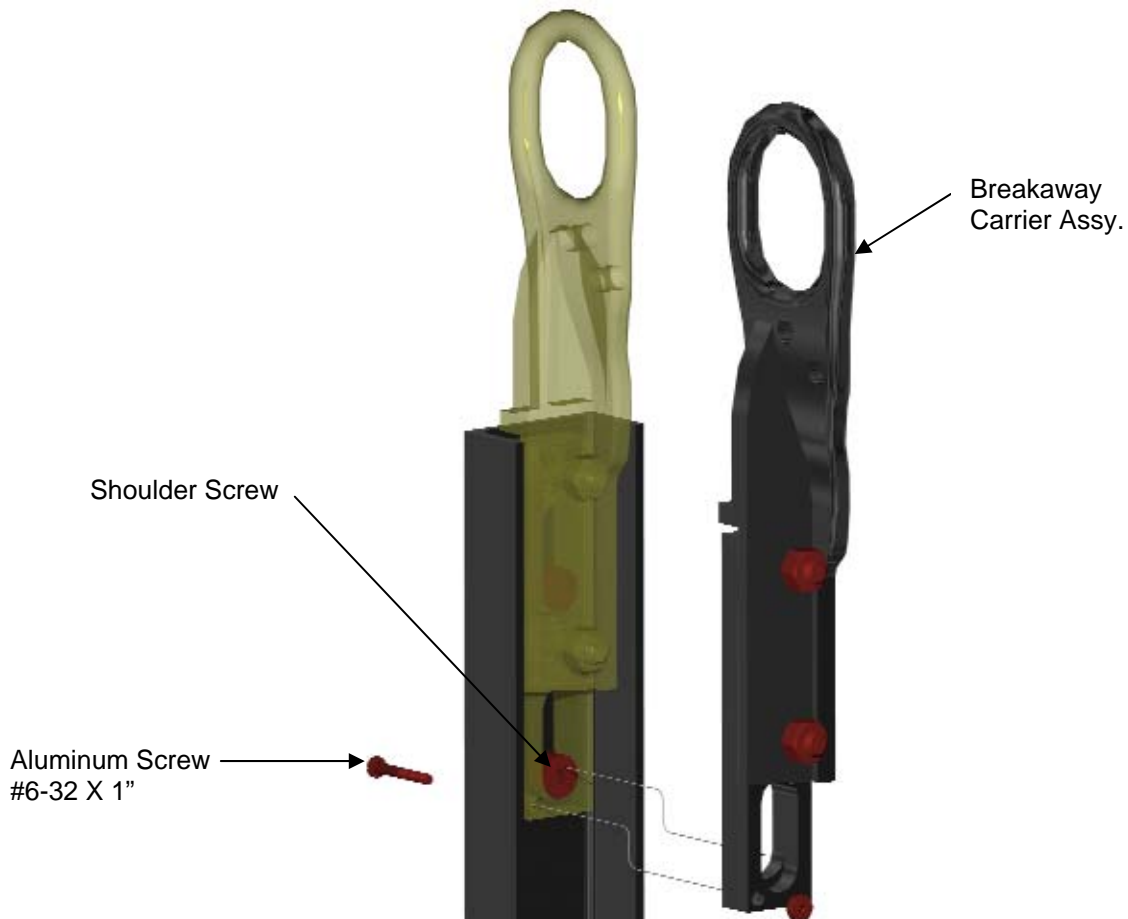


Fig. 1