

Roll-up Door - Change Lift Bar Retainer Magnets Installation Instructions



Read these instructions completely before installing.

Reference: FM-8.5-118 – R•O•M Roll-up Shutter Door Parts Manual

Tools Required:

- Pliers
- Waterproof adhesive sealant (Suggested Loctite PL Marine)
- Mallet
- Flat head screwdriver

Parts Required:


- R03989 Retainer Magnet LH Series IV
- R03992 Retainer Magnet RH Series IV

Magnet Retainer Removal:

1. If retainer magnet is still inside of lift bar, it will need to be removed.
2. Use a flat head screwdriver to separate the retainer from the lift bar.
3. Use the pliers to remove the retainer entirely.

Final Installation:

1. Apply a small amount of adhesive to the inside of the lift bar.
2. Insert the retainer magnet and tap with mallet until entirely inserted.

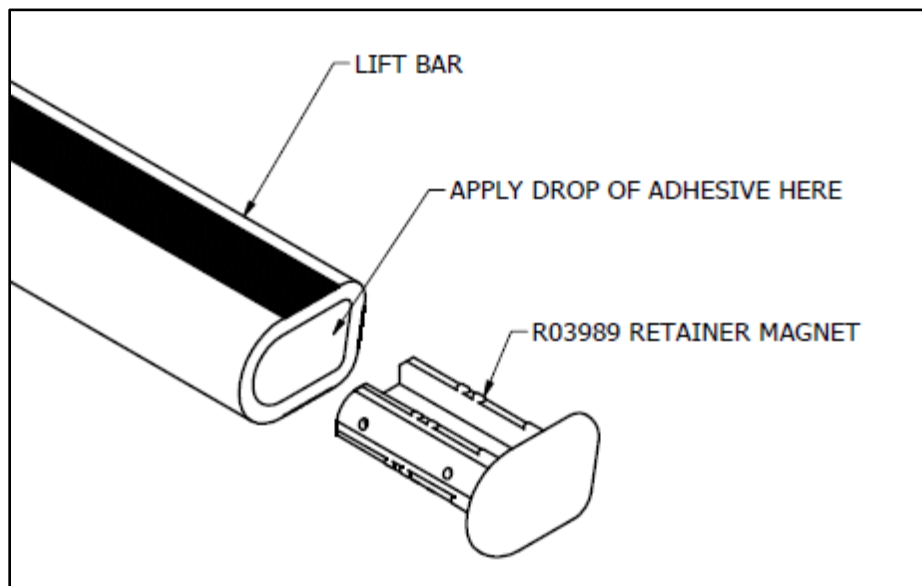

This completes the installation. If you have any questions or problems, please contact your Customer Development Representative at 800-827-3692.

These drawings & the information contained herein are the confidential & proprietary intellectual property of Safe Fleet and should not be disclosed to any third party without the express prior written consent Safe Fleet