

SHUTTER PULL STRAP INSTALLATION

FM-7.5-49
Rev D
02-15-08

This option will allow you to install a pull strap on your R·O·M Roll-up Shutter. This pull strap is used to assist in closing tall shutter doors.

Your kit you should contain the following parts:

- Rivet 3/16" .25" grip (1 Included)
- Washer, Flat 3/16 x 1, 18-8 SS (1 Included)
- Pull Strap, 36" with 3 Grommets (1 Included)

In addition to the parts listed above you will need the following tools:


- Drill with 3/16" Drill Bit (Not Included)
- Pop Rivet Gun (Not Included)

Installing the Nut Insert:

1. Drill a 3/16" hole as shown in Figure 1.

Installing the Strap:

1. Determine which grommet on the pull strap meets your needs. Then, place the grommet over the hole on the bottom rail.
2. Next, place the 3/16" rivet through the washer and into the grommet in the strap and install the rivet.
3. The extra material on the pull strap may be cut off within 1" of the grommet if required. It is recommended the end of the strap be melted to keep it from fraying if the excess is removed.

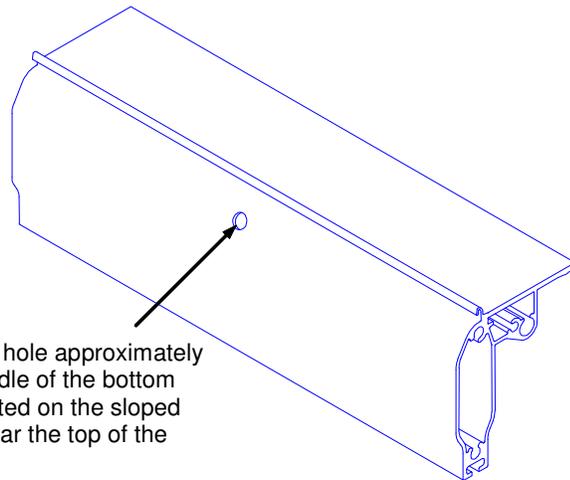

Drill 3/16" hole approximately in the middle of the bottom rail. Located on the sloped portion near the top of the extrusion.

Fig. 1

This completes the installation of the shutter pull strap. If you have any questions contact your R·O·M representative at 1-800-827-3692.