## Elastic Pull Strap for Shutter Door Installation Instructions



Congratulations on your purchase of the R•O•M Elastic Pull Strap for Roll-up Shutter Doors. Read these instructions completely before installing and follow these instructions.

The kit contains the following parts:


- Elastic Pull Strap (1 included)
- Footman Loop (2 included)

In addition to the parts listed above, you will need the following parts and tools:

- #10 x ½" long screws (4 required)
- Drill
- Drill bit for screw pilot holes
- Screwdriver

## Locating the mounting point on the bottom rail:

Locate a footman loop approximately 4" from either the left or right side of the bottom rail. Mark the locations of the mounting screws and drill pilot holes for the  $\#10 \times \frac{1}{2}$  screws (not provided).

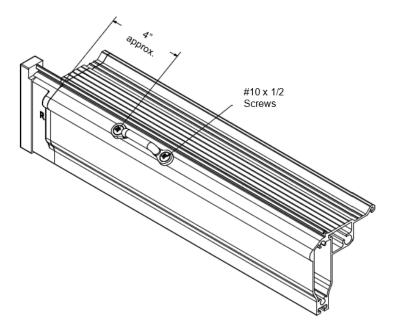

## Locating the mounting point on the compartment wall:

The compartment wall mounting point needs to be located so the pull strap is fully stretched when the shutter is closed. When the shutter is open, the pull strap should be easily accessible to aid in closing the shutter.

This completes the installation of the elastic pull strap. If you have any questions or problems, please contact your Customer Development Representative at 800-827-3692.

These drawings & the information contained herein are the confidential & proprietary intellectual property of Safe Fleet and should not be disclosed to any third party without the express prior written consent Safe Fleet

